Parts Manual for

SNAPPER®

LARGE FRAME 26" & 28" TWO-STAGE SNOWTHROWERS 2009

MODEL
L1226E (1695571)
L1428E (1695572)

Briggs & Stratton Yard Power Products Group
535 Macon Road
McDonough, GA, 30253 U.S.A.
800-935-2967

Revision A, 9/26/2008

Manual No. 1737016
TP 400-5408-A-LF-N

PAGE	GROUP
4	Handle & Controls Group
8	Auger Housing & Chute Group
12	Auger Drive Group - 26" Model
14	Gear Box Assembly - 26" Model
16	Auger Drive Group - 28" Model
18	Gear Box Assembly - 28" Model
20	Engine & Frame Group
24	Traction Drive Group - Standard - 26" Model
26	Traction Drive Group - EZ Turn - 28" Model
30	Wheel & Tire Group
32	Decals Group

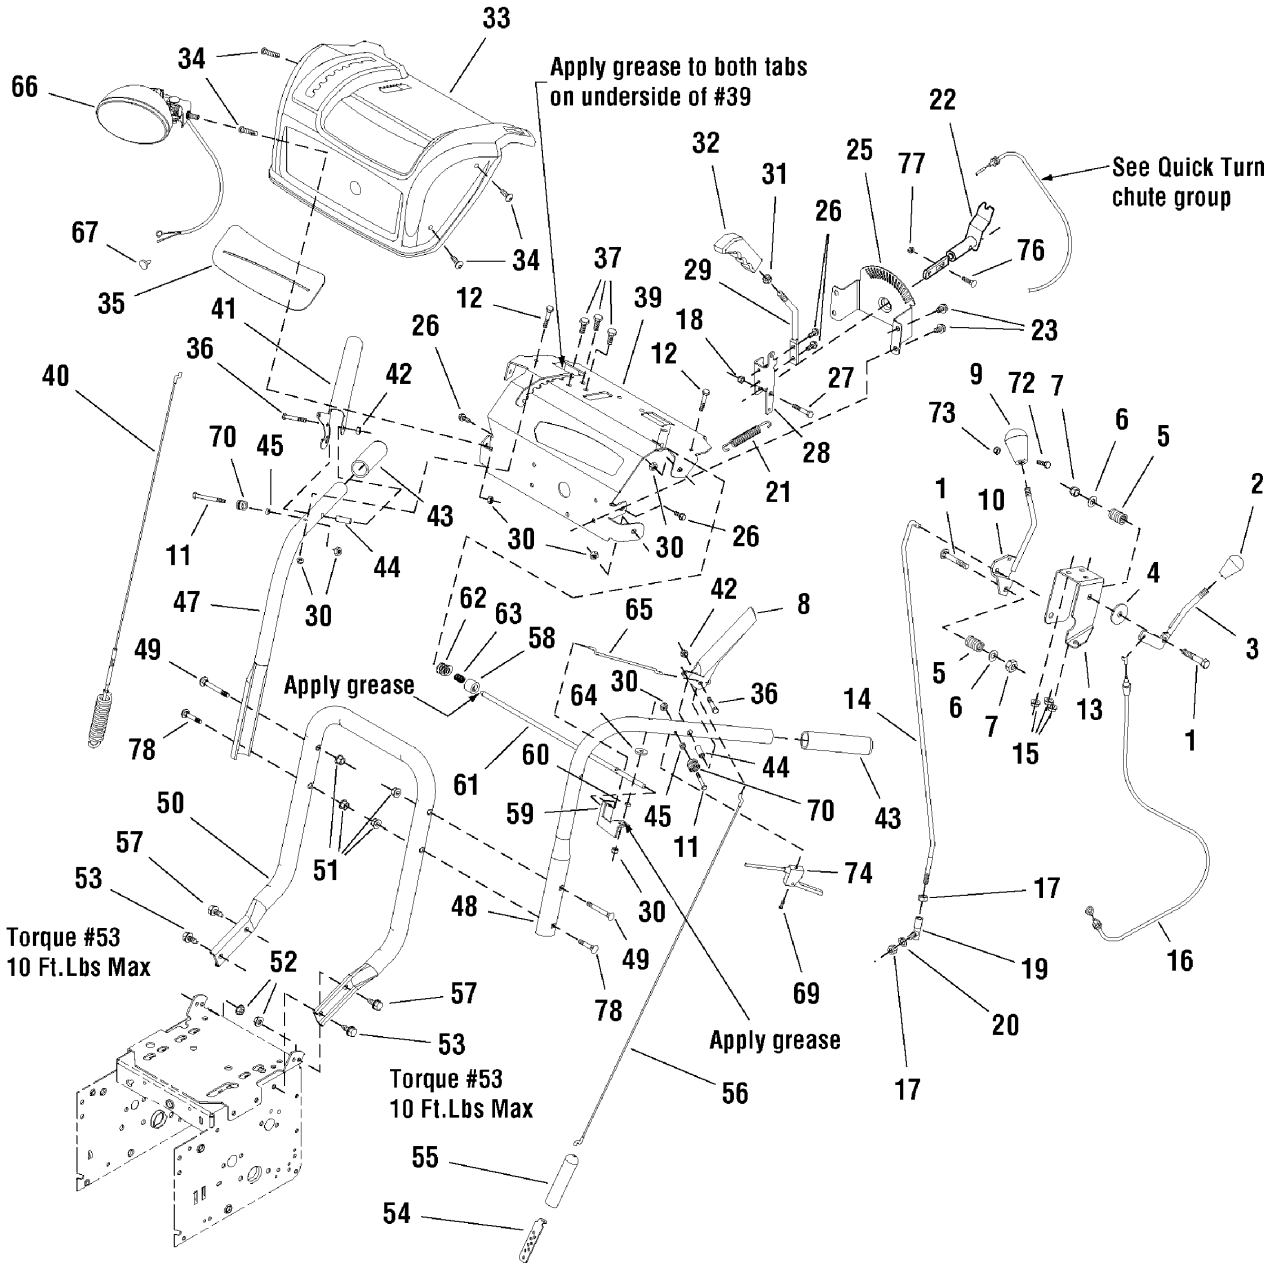
Apply grease to both tabs on underside of #39
See Quick Turn chute group
Apply grease
Torque #53 10 Ft.Lbs Max
Torque #53 10 Ft.Lbs Max
Apply grease

Handle & Controls Group

Item	Part No	Qty	Description	Note
1	1923701	2	CAPSCREW, Hex Head 3/8-16 x 2 G5	
2	1732470	1	KNOB, Interior Thread 3/8-16	
3	1732427	1	ROD, 3/8 Diameter 5" Large, 3/8-16 x 1 Chute	
4	1924356	1	WASHER, 3/8	
5	724361	2	SPRING	
6	1918266	2	WASHER, 3/8	
7	1919439	2	NUT, Hex Lock ESNA Light 3/8-16	
8	1722667	1	HANDLE, Clutch L.H.	
9	1733192	1	KNOB, Slot Speed	
10	1736836	1	ROD & PLATE ASSEMBLY, Speed Control	
11	1923282	2	CAPSCREW, Hex Head 1/4-20 x 2-1/2 G5	
12	1921962	2	CAPSCREW, Hex Head 1/4-20 x 1-3/4 G5	
13	1733045A	1	BRACKET, Trac & Deflector Control	
14	1734354	1	ROD, Speed Control	
15	1931277	3	NUT, Hex Flange 5/16-18, Whiz Lock, Small	
16	1732971	1	CABLE, Deflector Control	
17	2820263	2	NUT, Hex 5/16-24	
18	1960608	1	NUT, Hex Flange 1/4-20 Centerlock Large	
19	724360	1	BALLJOINT, Steel	
20	1917356	1	LOCKWASHER, Spring 5/16	
21	1732970	1	SPRING, Extension	
22	1736706	1	TUBE & BRACKET ASSEMBLY, Cable Support	
23	1924856	4	SCREW, Hex Washer Head Taptite 5/16-18 x 1/2	
25	1732364	1	SUPPORT, Chute Control 14GA	
26	1927429	4	SCREW, Hex Washer Head Taptite 1/4-20 x 5/8	
27	1732944	1	BOLT, Shoulder 1/4-20	
28	1733142	1	BRACKET, Support Quick Turn	
29	1732369	1	ROD, Chute	
30	1920397	7/8	NUT, Hex Lock ESNA Light 1/4-20	*Quantity 7 Used on 28" Model, Quantity 8 Used on 26" Model*
31	1917421	1	NUT, Hex Jam 3/8-16	
32	723122	1	GRIP, Lever	
33	1733777D	1	COVER, Panel	
34	1960715	3	SCREW, Truss Head Torx Drive 1/4-20 x 3/4	
35	1733204	1	BELLOWS, Black Rubber Quick Turn	
36	1922837	2	CAPSCREW, Hex Head 1/4-20 x 1-1/2 G5	
37	1931333	3	CARRIAGE BOLT, 5/16-18 x 3/4 G5	
39	1732064A	1	SUPPORT, Dash Panel Cover	

Footnotes:

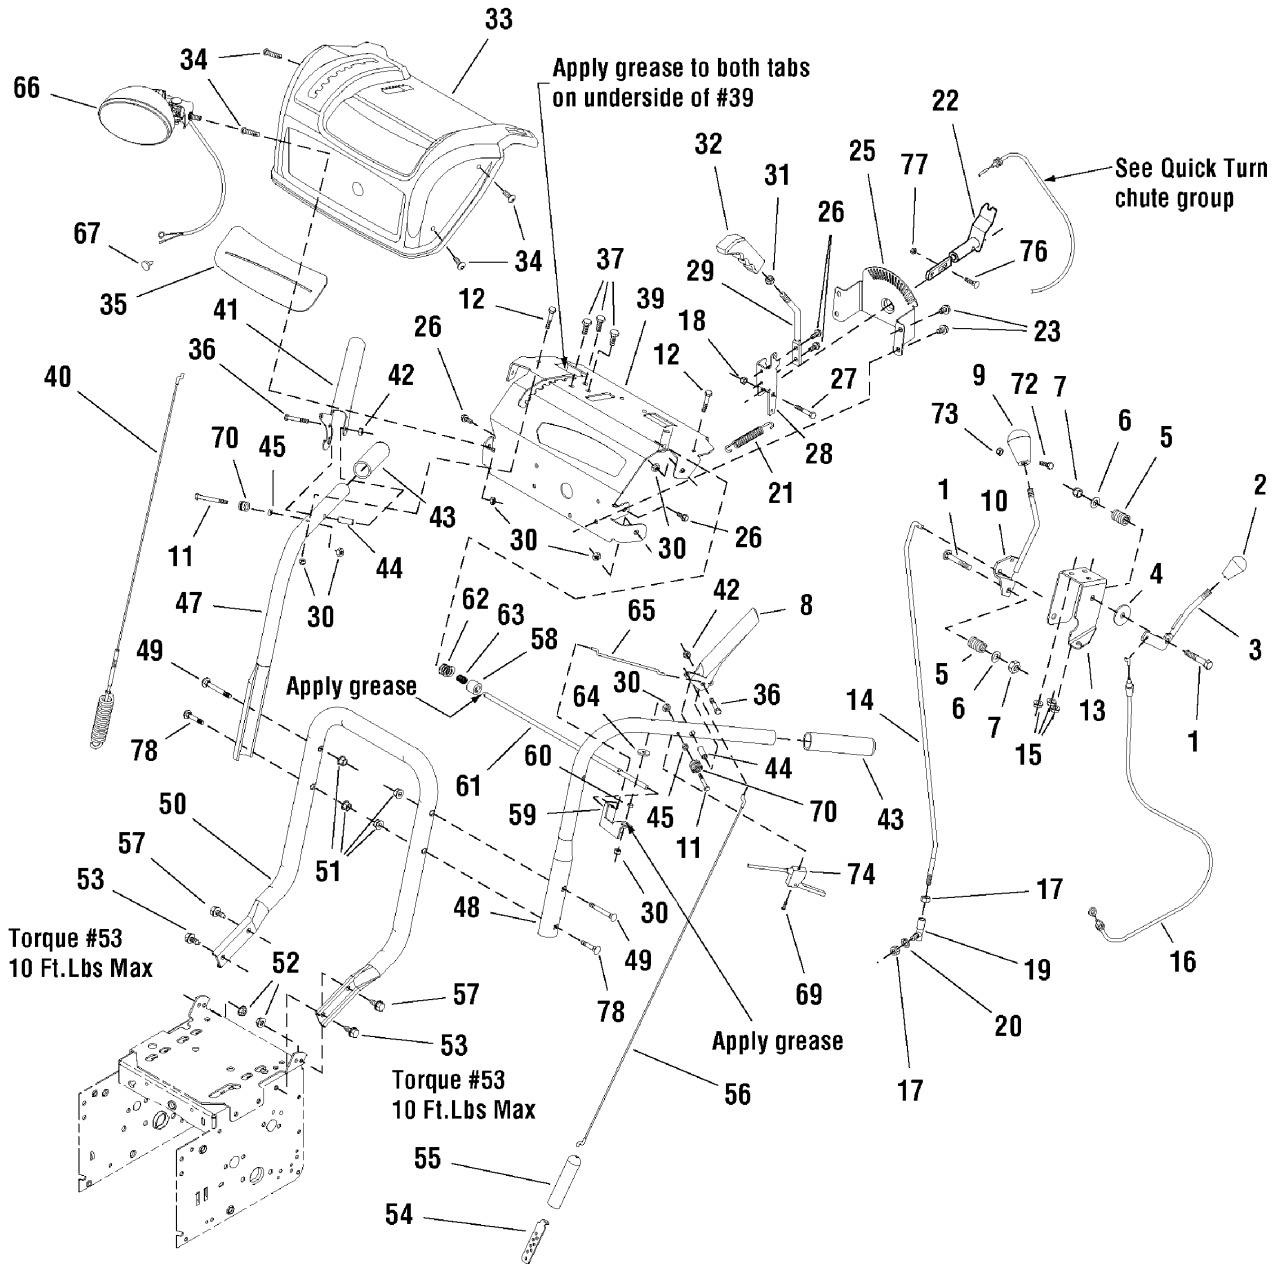
Apply grease to both tabs on underside of #39
See Quick Turn chute group
Apply grease
Apply grease
Torque #53 10 Ft.Lbs Max
Torque #53 10 Ft.Lbs Max

Handle & Controls Group

Item	Part No	Qty	Description	Note
40	1732471	1	CABLE & SPRING ASSEMBLY, Auger Drive R.H.	
41	1722638	1	HANDLE, Clutch R.H.	
42	1923358	2	NUT, Hex Centerlock 1/4-20	
43	1726317	2	GRIP	
44	1715655	2	SPACER	
45	1678392	2	SPACER	
47	1734587A	1	HANDLE, Upper R.H.	
48	1734586A	1	HANDLE, Upper L.H.	
49	1960273	2	CARRIAGE BOLT, 5/16-18 x 2-1/4 G5	
50	1736301A	1	HANDLE, Lower	
51	1960686	4	NUT, Hex Flange 5/16-18	
52	1935048	2	NUT, Hex Flange 5/16-18 Two-Way Lock	
53	1664847	2	SCREW, Hex Washer Head Taptite 5/16-18 x 3/4	
54	723259	1	BRACKET, Cable Adjusting	
55	723154	1	BOOT, Spring End Cover	
56	727331	1	CABLE,	
57	1921333	2	CAPSCREW, Hex Head 5/16-18 x 1 G5	
58	1679166	1	SPACER, Powdered Metal	
59	1733505A	1	BRACKET, Free Hand Control 12GA	
60	1733095	1	SPACER, Powdered Metal	
61	1733509	1	ROD & SPRING ASSEMBLY, w/Pin	
62	1960027	4	WASHER, 1/2	
63	2108360	1	SPRING, Compression	
64	1960353	1	WASHER, 1/4	
65	1722630	1	ROD, Hold Down E-Coat	
66	1732322	1	HEADLIGHT ASSEMBLY, Oval, Clear	*Used on 28" Model*
67	1704351	5	FASTENER, Panel	
69	1725702	1	SCREW, Pan Head Torx #10 x 1/2 Thick Cut	
70	724621	2	SPOOL CABLE, Auger Control	
72	1960589	1	SCREW, Round Head Phillips #10-24 x 3/4	
73	1933896	1	NUT, Hex Lock 10-24 w/Nylon Insert	
74	1718791	1	CABLE & HANDLE ASSEMBLY	*Used on 28" Model*
76	7091776	1	CARRIAGE BOLT, 1/4-20 x 3/4	
77	1923358	1	NUT, Center-Lock, 1/4-20	
78	1931338	1	BOLT, Carriage, 5/16-18 x 1-3/4	

Footnotes:

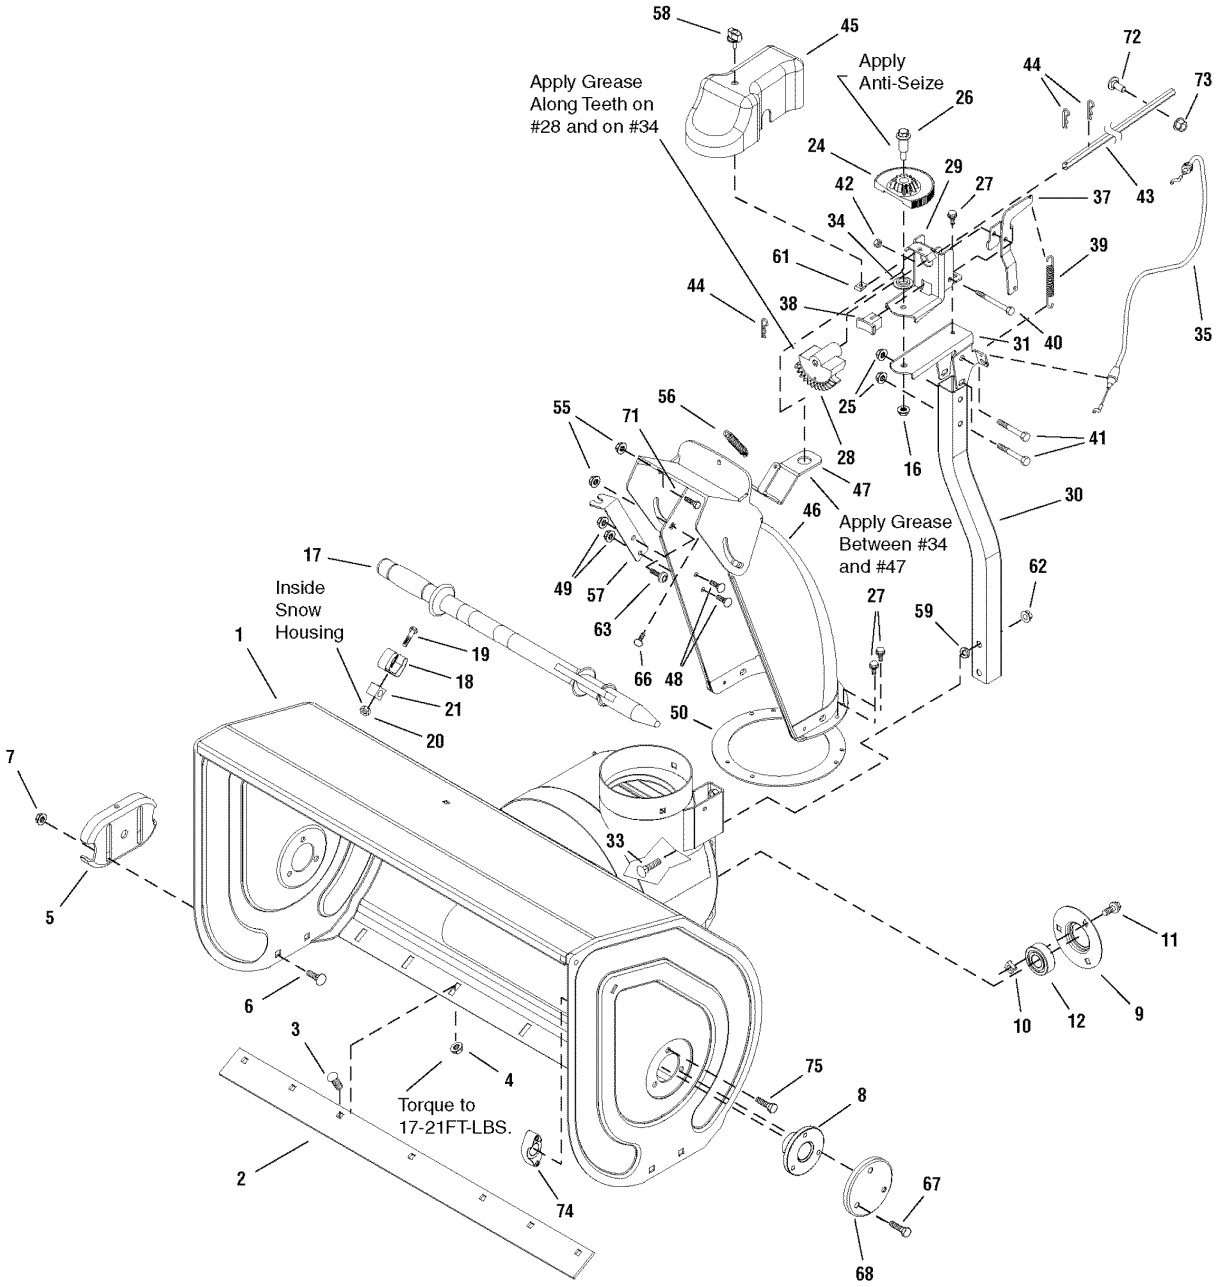
Apply Grease
Along Teeth on
#28 and on #34
Apply
Anti-Seize
Apply Grease
Between #34
and #47
Inside
Snow
Housing
Torque to
17-21FT-LBS.
58
45
72
44
73
26
24
29
42
27
37
43
34
39
61
44
38
40
31
35
25
16
55
71
56
41
28
47
30
46
17
49
57
63
66
48
27
62
59
1
19
18
21
20
50
7
5
33
11
6
10
12
9
3
4
75
8
2
74
67
68

Auger Housing & Chute Group

Item	Part No	Qty	Description	Note
1	1736708D	1	HOUSING ASSEMBLY, 26”	*(Used on 26" Models)*
1	1734556D	1	HOUSING ASSEMBLY, 28"	*(Used on 28" Models)*
2	1732384A	1	BLADE, Scraper 26”	
2	1709947A	1	BLADE, Scraper 28”	
3	1960699	5	CARRIAGE BOLT, 5/16-18 x 5/8 G5	
4	1935048	5	NUT, Hex Flange 5/16-18 Two-Way Lock	
5	1727854A	2	SKID, Shoe Reversible	
6	1960711	4	CARRIAGE BOLT, 3/8-16 x 3/4 G5	
7	1960687	4	NUT, Hex Flange 3/8-16 ESNA	
8	1733103	2	BEARING, Flange	*(Used on 28" Models)*
9	1665982	1	BEARING, Retainer	
10	1930659	3	RETAINER, Nut, 5/16-18	
11	1960738	3	SCREW, Hex Whiz Lock Flange 5/16-18 x 3/4	
12	2108202	1	BEARING	
16	1931277	1	NUT, Hex Flange 5/16-18, Whiz Lock	
17	1736094	1	STICK, Cleanout w/Brush	
18	722242	2	CLIP, Retainer	
19	2860604	2	SCREW, Hex Washer Head	
20	1933896	2	NUT, Hex Lock 10-24 w/Nylon Insert	
21	724565	2	BLOCK, Universal Pivot	
24	1732608	1	GEAR, 13 Tooth	
25	1960684	2	NUT, Hex KEPS 5/16-18 Conical Washer	
26	1732412	1	BOLT, Shoulder 5/16-18 x 3/5	
27	1925003	6	SCREW, Hex Washer Head Taptite 1/4-20 x 1/2	
28	1732607	1	GEAR, Sector 34 Tooth Powdered Metal	
29	1732602A	1	SUPPORT, Driver Gear	
30	1734414A	1	TUBE, Support	
31	1732606A	1	BRACKET, Gear Support	
33	1931353	2	CARRIAGE BOLT, 3/8-16 x 1-3/4	
34	1733026	1	WASHER, Powdered Metal	
35	1732238	1	CABLE, Chute Brake	
37	1732837A	1	BRACKET, Brake	
38	1732308	1	ARM & PAD ASSEMBLY, Brake	
39	1679554	1	SPRING, Extension	
40	1923282	1	CAPSCREW, Hex Head 1/4-20 x 2-1/2 G5	
41	1922127	2	CAPSCREW, Hex Head 5/16-18 x 1-3/4	
42	1923358	1	NUT, Hex Centerlock 1/4-20	

Footnotes:

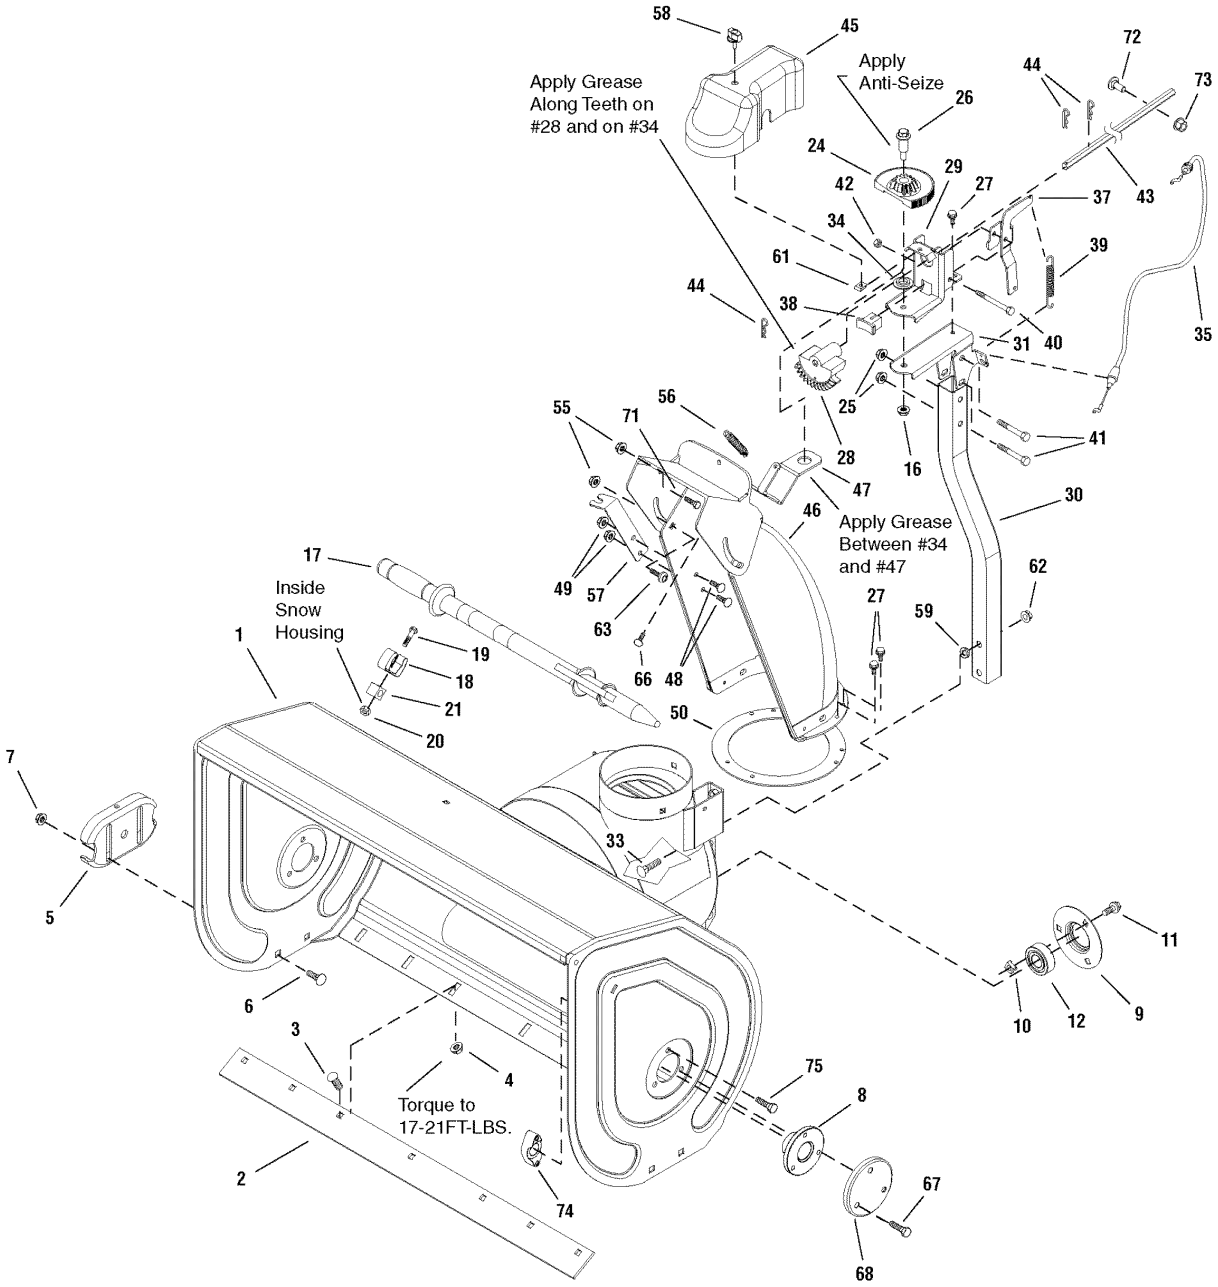
Apply Grease
Along Teeth on
#28 and on #34
Apply
Anti-Seize
Apply Grease
Between #34
and #47
Inside
Snow
Housing
Torque to
17-21FT-LBS.

Auger Housing & Chute Group

Item	Part No	Qty	Description	Note
43	1736707	1	ROD, Hex Chute	
44	1722460	3	PIN, Quick	
45	1732241	1	COVER, Chute	
46	1732506	1	CHUTE & DEFLECTOR ASSEMBLY	
47	1732028	1	BRACKET, Chute Support	
48	1960252	2	CARRIAGE BOLT, 1/4-20 x 5/8 G5	
49	1960294	2	NUT, Hex Flange 1/4-20 Whiz Lock	
50	1732172A	1	RING, Chute Base	
55	1960686	3	NUT, Hex Flange 5/16-18 ESNA	
56	1733455	1	SPRING, Extension	
57	1733082A	1	BRACKET, Cable	
58	696239	1	KNOB & SCREW ASSEMBLY	
59	1931942	2	NUT, Push Pal 3/8	
61	1960593	1	NUT, Retainer Speed #10-24 w/Extrusion	
62	1960680	2	NUT, Hex Keps Conical Washer 3/8-16	
63	1960756	2	SCREW, Truss Head Trox Drive 5/16-18 x 3/4	
66	7091542	3	SCREW, Pan Head Self Tap Torx 5/16-18 x 1/2	
67	1931202	6	SCREW, Hex Washer head Taptite 5/16-18 x 1-1/4	*(Used on 28" Models)*
68	1734932A	2	COVER, Bushing	*(Used on 28" Models)*
71	1960086	1	SCREW, Truss Head Torx 5/16-18 x 7/8	
72	720065	1	BOLT, Carriage, 1/4-20 x 1	
73	1960694	1	NUT, Flange, Nylock, 1/4-20	
74	724427	2	BEARING, Auger Shaft	*(Used on 26" Models)*
75	722839	4	SCREW, 5/16-18 x 3/4	*(Used on 26" Models)*

Footnotes:

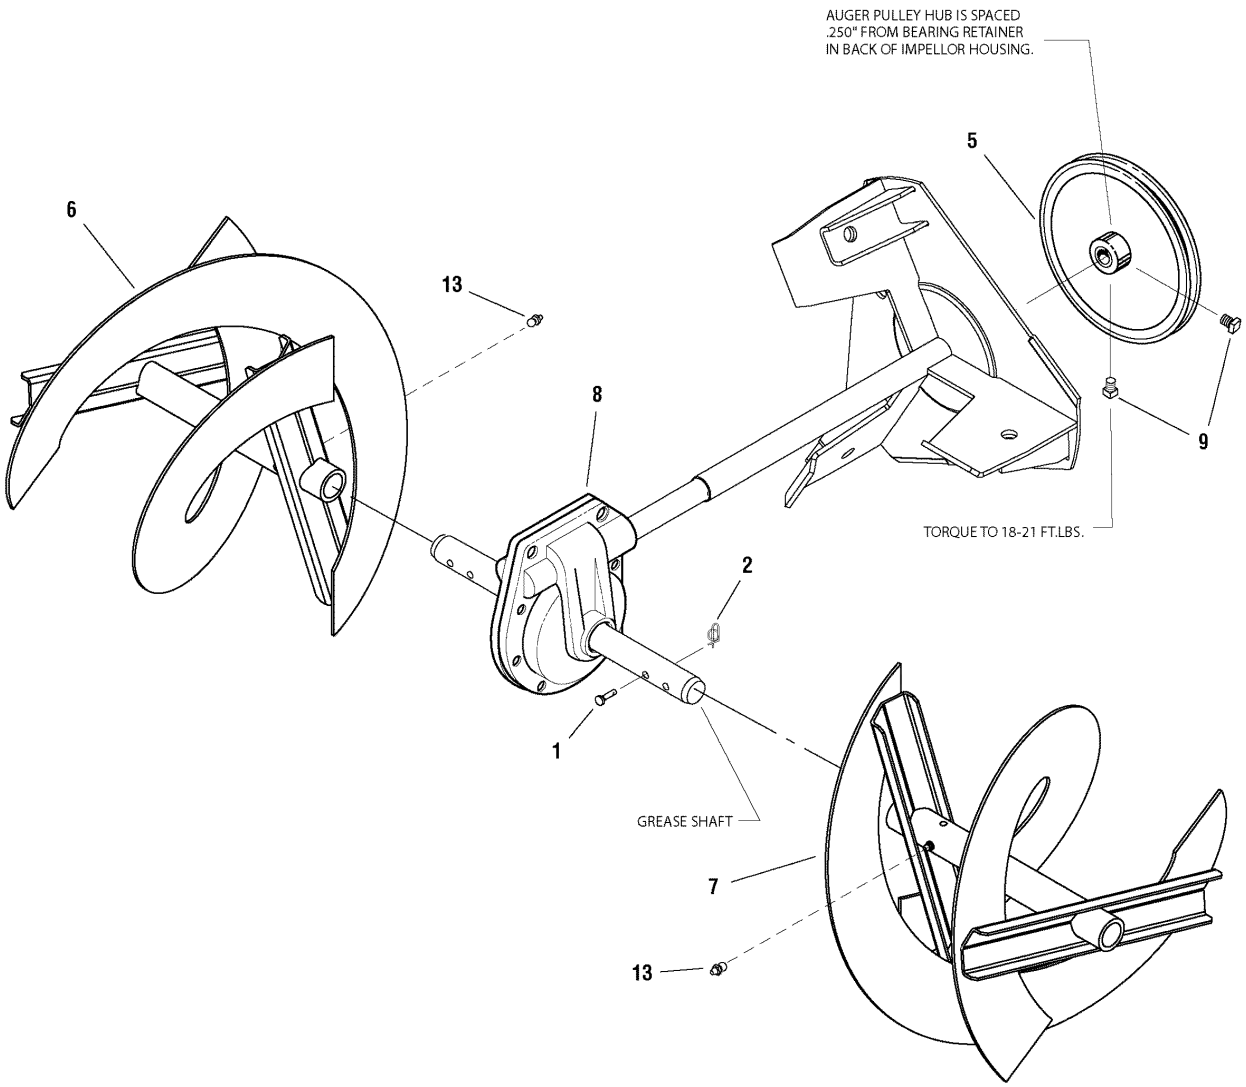
AUGER PULLEY HUB IS SPACED
.250" FROM BEARING RETAINER
IN BACK OF IMPELLOR HOUSING.
5
6
13
8
9
TORQUE TO 18-21 FT.LBS.
2
1
GREASE SHAFT
7
13

Auger Drive Group - 26" Model

Item	Part No	Qty	Description	Note
1	1668344	2	PIN, SHEAR	
2	7023590	2	COTTER PIN, 1/4” Self Locking	
5	1732185	1	PULLEY, w/Hub	
6	1734674A	1	AUGER ASSEMBLY, 24” & 26” R.H.	
7	1734673A	1	AUGER ASSEMBLY, 24” & 26” L.H.	
8	1687429	1	GEAR BOX ASSEMBLY KIT	
9	1928721	2	SCREW, Set, Square Head Cup Point 5/16-18 x 1/2 G8	
13	2821133	2	FITTING, Lube, 1/4 Drive, No Check Ball	

Footnotes:

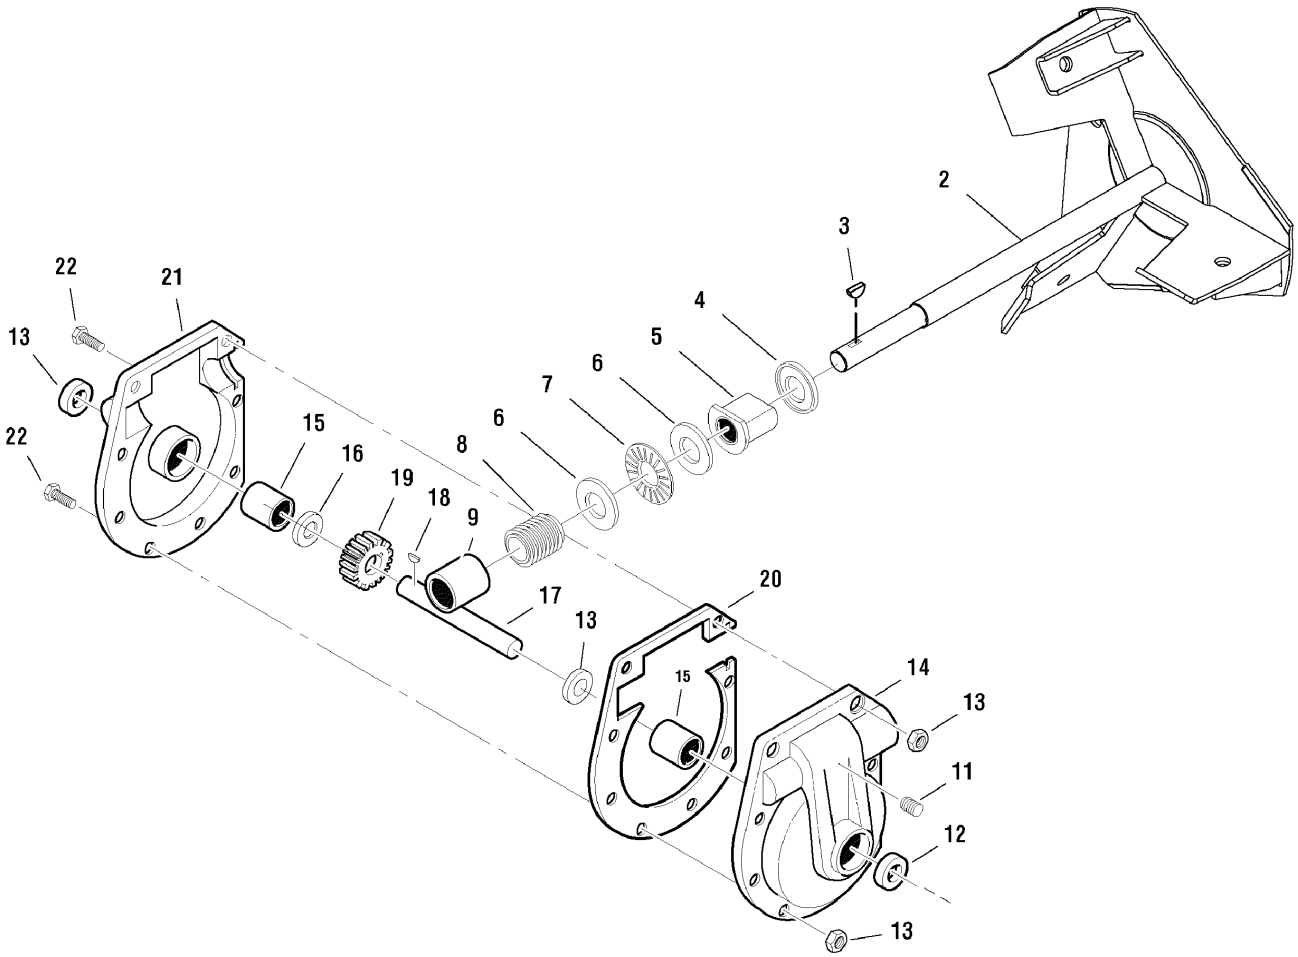
2
3
4
5
6
7
6
8
9
18
19
16
15
22
21
22
13
17
13
20
15
14
13
11
12
13

Gear Box Assembly - 26" Model

Item	Part No	Qty	Description	Note
2	1736709A	1	IMPELLER ASSEMBLY	
3	724366	1	KEY	
4	724423	1	RING	
5	724729	1	BEARING, Flange, 3/4 x 1-1/8	
6	724079	2	WASHER, 3/4 x 1-1/4	
7	724352	1	BEARING, Roller, 3/4 x 1-1/4	
8	724421	1	ROLLED WORM CASE	
9	724420	1	SLEEVE, Brearing, 3/4 x 7/8	
11	724426	1	PLUG, Pipe, 1/4-18	
12	725874	2	SEAL, Oil	
13	725338	8	NUT, Hex-Flange, Locking, 5/16-24	
14	725981	1	GEAR CASE, L.H.	
15	724424	2	SLEEVE, Bearing	
16	2168111	1	THRUST WASHER, 1 x 1.54	
17	1736711	1	SHAFT, Auger Output	
18	725433	1	KEY, Woodruff, 1-3/4 x 1/4	
19	724419	1	GEAR, Worm	
20	725983	1	GASKET, Gearbox	
21	725982	1	GEAR CASE, R.H.	
22	725996	7	CAPSCREW. Hex, 5/16 - 24 x 1	

Footnotes:

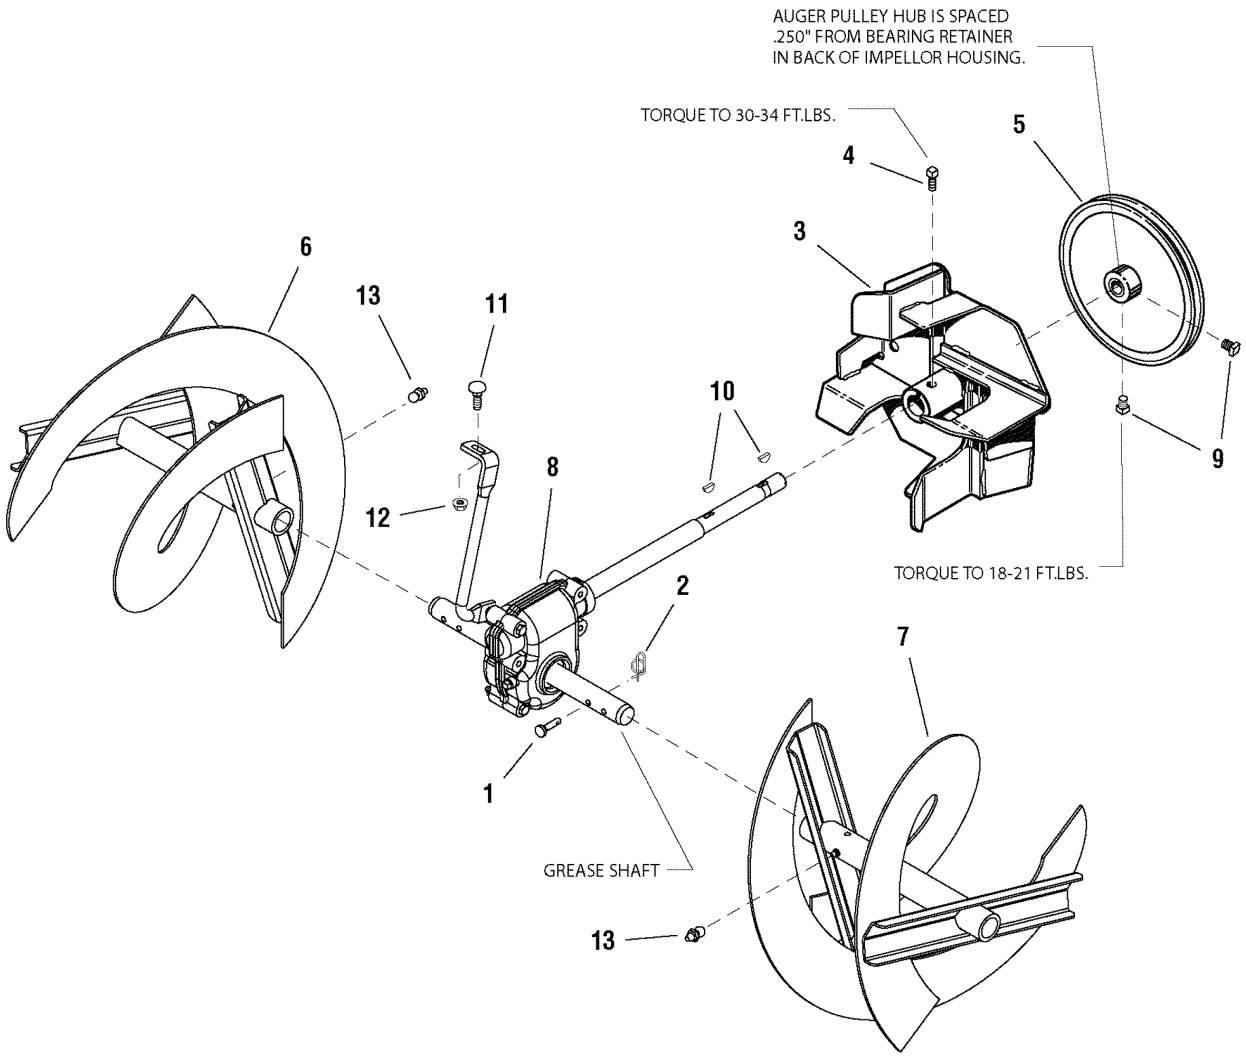
AUGER PULLEY HUB IS SPACED
.250" FROM BEARING RETAINER
IN BACK OF IMPELLOR HOUSING.
TORQUE TO 30-34 FT.LBS.
TORQUE TO 18-21 FT.LBS.
GREASE SHAFT
1
2
3
4
5
6
7
8
9
10
11
12
13
13

Auger Drive Group - 28" Model

Item	Part No	Qty	Description	Note
1	1668344	2	PIN, SHEAR	
2	7023590	2	COTTER PIN, 1/4” Self Locking	
3	1612187A	1	IMPELLER ASSEMBLY, Large Frame Snow	
4	1960474	1	SCREW, Set, Square Head Cup Point 3/8-16 x 1/2 G8	
5	1732185	1	PULLEY, w/Hub	
6	1734676A	1	AUGER ASSEMBLY, 28” & 30” R.H.	
7	1734675A	1	AUGER ASSEMBLY, 28” & 30” L.H.	
8	1732303	1	GEAR BOX ASSEMBLY	
9	1928721	2	SCREW, Set, Square Head Cup Point 5/16-18 x 1/2 G8	
10	2818312	2	KEY, Woodruff	
11	1931333	1	CARRIAGE BOLT, 5/16-18 x 3/4 G5	
12	1931277	1	NUT, Hex Flange Whiz Lock, 5/16-18HEX FLANGE 5/16-18	
13	2821133	1	FITTING, Lube, 1/4 Drive, No Check Ball	

Footnotes:

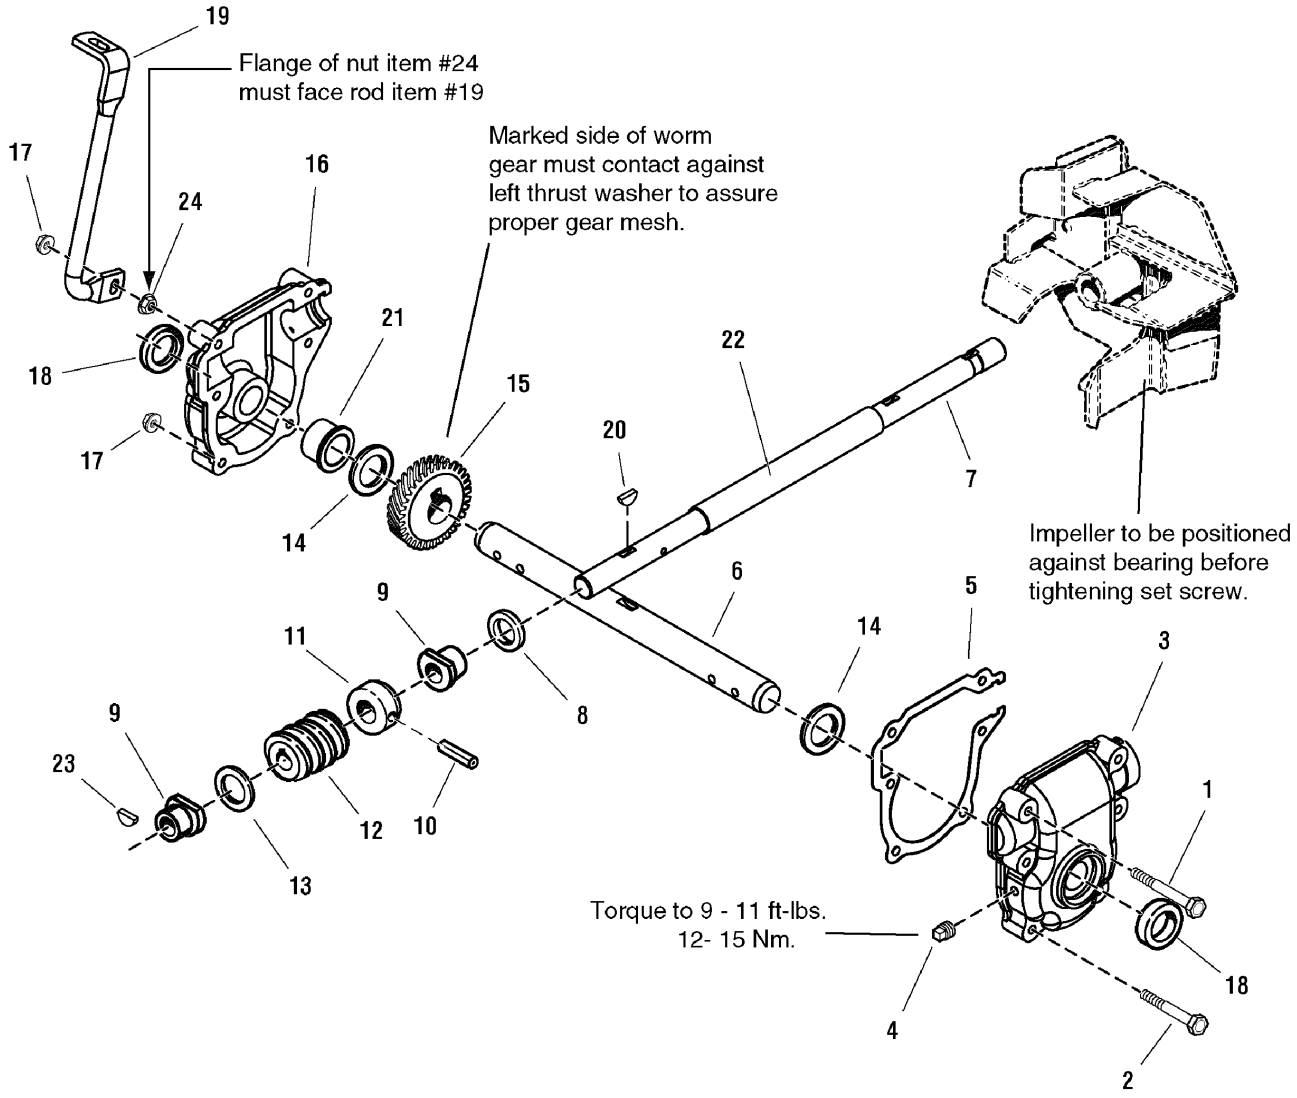
19
Flange of nut item #24
must face rod item #19
17
16
24
Marked side of worm
gear must contact against
left thrust washer to assure
proper gear mesh.
18
21
22
15
20
17
7
14
Impeller to be positioned
against bearing before
tightening set screw.
6
9
5
11
14
3
8
9
1
23
12
10
Torque to 9 - 11 ft-lbs.
12- 15 Nm.
13
18
4
2

Gear Box Assembly - 28" Model

Item	Part No	Qty	Description	Note
1	1926105	1	CAPSCREW, 1/4-20 x 2-3/4	
2	1960346	5	CAPSCREW, 1/4-20 x 2-1/4	
3	1734218	1	GEAR CASE, L.H.	
4	1668971	1	TAPERED PIPE PLUG	
5	1612124	1	GASKET	
6	1732440	1	SHAFT, Auger Cutoff	
7	1732182	1	SHAFT, Worm Cutoff	
8	1612093	1	SEAL, Oil	
9	1612149	2	FLANGE BUSHING	
10	2836098	1	PIN, Drive Lock	
11	1612127	1	THRUST COLLAR	
12	1612142	1	ROLLED WORM CASE	
13	2168111	1	THRUST WASHER	
14	2118315	2	THRUST WASHER	
15	1612141	1	GEAR, Worm	
16	1734219	1	GEAR CASE, R.H.	
17	1930642	6	NUT, Top Lock Flange, 1/4-20	
18	2118118	1	SEAL	
19	1732152	1	WIREFORM BRACKET	
20	2818312	1	KEY, Woodruff, .18 x .62	
21	1732991	2	BUSHING	
22	1612111	1	TUBE	
23	2830246	1	KEY, Woodruff, 1/4 x 3/4	
24	1960294	1	NUT, Hex-Flange, 1/4-20	

Footnotes:

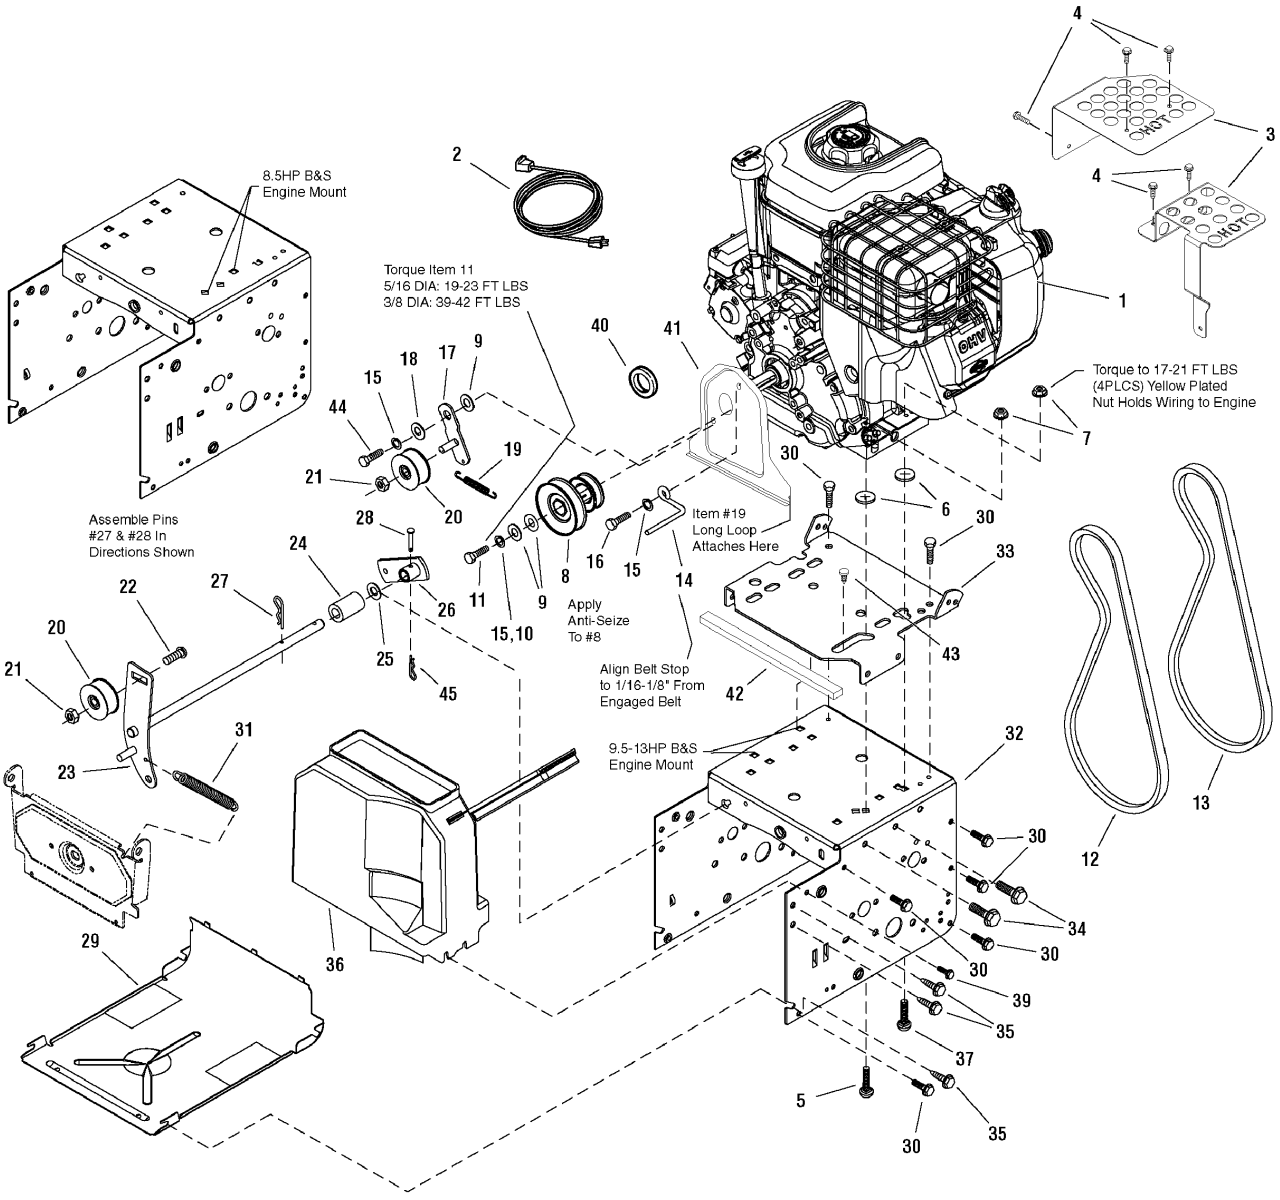
8.5HP B&S
Engine Mount
Torque Item 11
5/16 DIA: 19-23 FT LBS
3/8 DIA: 39-42 FT LBS
Assemble Pins
#27 & #28 In
Directions Shown
Apply
Anti-Seize
To #8
Item #19
Long Loop
Attaches Here
Align Belt Stop
to 1/16-1/8" From
Engaged Belt
9.5-13HP B&S
Engine Mount
Torque to 17-21 FT LBS
(4PLCS) Yellow Plated
Nut Holds Wiring to Engine
HOT
HOT

Engine & Frame Group

Item	Part No	Qty	Description	Note
1	--	1	* ENGINE, 11.5GT B&S Mod. #15C114-0117-E8	
1	--	1	* ENGINE, 13.5GT B&S Mod. #20M214-0117-E1	
2	1724064	1	CORD, Electric Start	
3	1734698	1	GUARD, Muffler	*(Used on 28" Models)*
3	1734732	1	GUARD, Muffler	*(Used on 26" Models)*
4	1736103	3	SCREW, Hex Washer Head Taptite, 10-24 x 3/8	
5	720064	4	CARRIAGE BOLT, 5/16-18 x 1-1/2	
6	720376	4	NUT, Speed	
7	2831277	1	NUT, Hex Flange 5/16-18 Whiz Lock	
7	1960686	3	NUT, Hex Flange 5/16-18 ESNA	
8	722085	1	PULLEY, Engine	
9	1922755	2	WASHER, 3/8	*(Used on 28" Models)*
9	1919381	1/3	WASHER, 5/16-1	*(Quantity 1 Used on 28" Models, Quantity 3 Used on 26" Models)*
10	1916965	1	LOCKWASHER, Spring 3/8	*(Used on 28" Models)*
11	1960428	1	CAPSCREW, Hex Head 3/8-24 x 1-1/4 G8	*(Used on 28" Models)*
11	1921982	1	CAPSCREW, Hex Head 3/16-24 x 1-1/4 G8	*(Used on 26" Models)*
12	1733324	1	V-BELT, Drive, 3L 33.13	
13	1733051	1	V-BELT, Auger, 4L 36.50	
14	1733014	1	STOP, Belt	
15	1917356	3/4	LOCKWASHER, Spring 5/16	*(Quantity 3 Used on 28" Models, Quantity 4 Used on 26" Models)*
16	1921515	2	CAPSCREW, Hex Head 5/16-24 x 3/4 G5	
17	722090	1	IDLER BRACKET ASSEMBLY, Drive Belt	
18	722072	1	BUSHING, Idler Bracket	
19	724418	1	SPRING, Extension Idler	
20	722378	2	IDLER, Plastic Ball Bearing	
21	1960251	2	NUT, Hex Centerlock Jam 3/8-16	
22	724823	1	CARRIAGE BOLT, 3/8-16 x 1-1/4	
23	1733055	1	IDLER, Auger	
24	722118	1	SPACER/AUGER BRACKET	
25	1960027	1	WASHER, 1/2	
26	1733451	1	BRACKET & HUB ASSEMBLY, Spring	
27	725367	1	PIN, Hair	
28	1736381	1	PIN, Clevis	
29	1740906A	1	PANEL, Bottom	
30	1927429	12	SCREW, Hex Washer Head Taptite 1/4-20 x 5/8	
31	722455	1	SPRING, Extension Auger Idler	
32	1733154D	1	FRAME, EZ Turn Axle	*(Used on 28" Models)*

Footnotes:

Note* See your local Briggs & Strattion Distributor for Parts & Service.

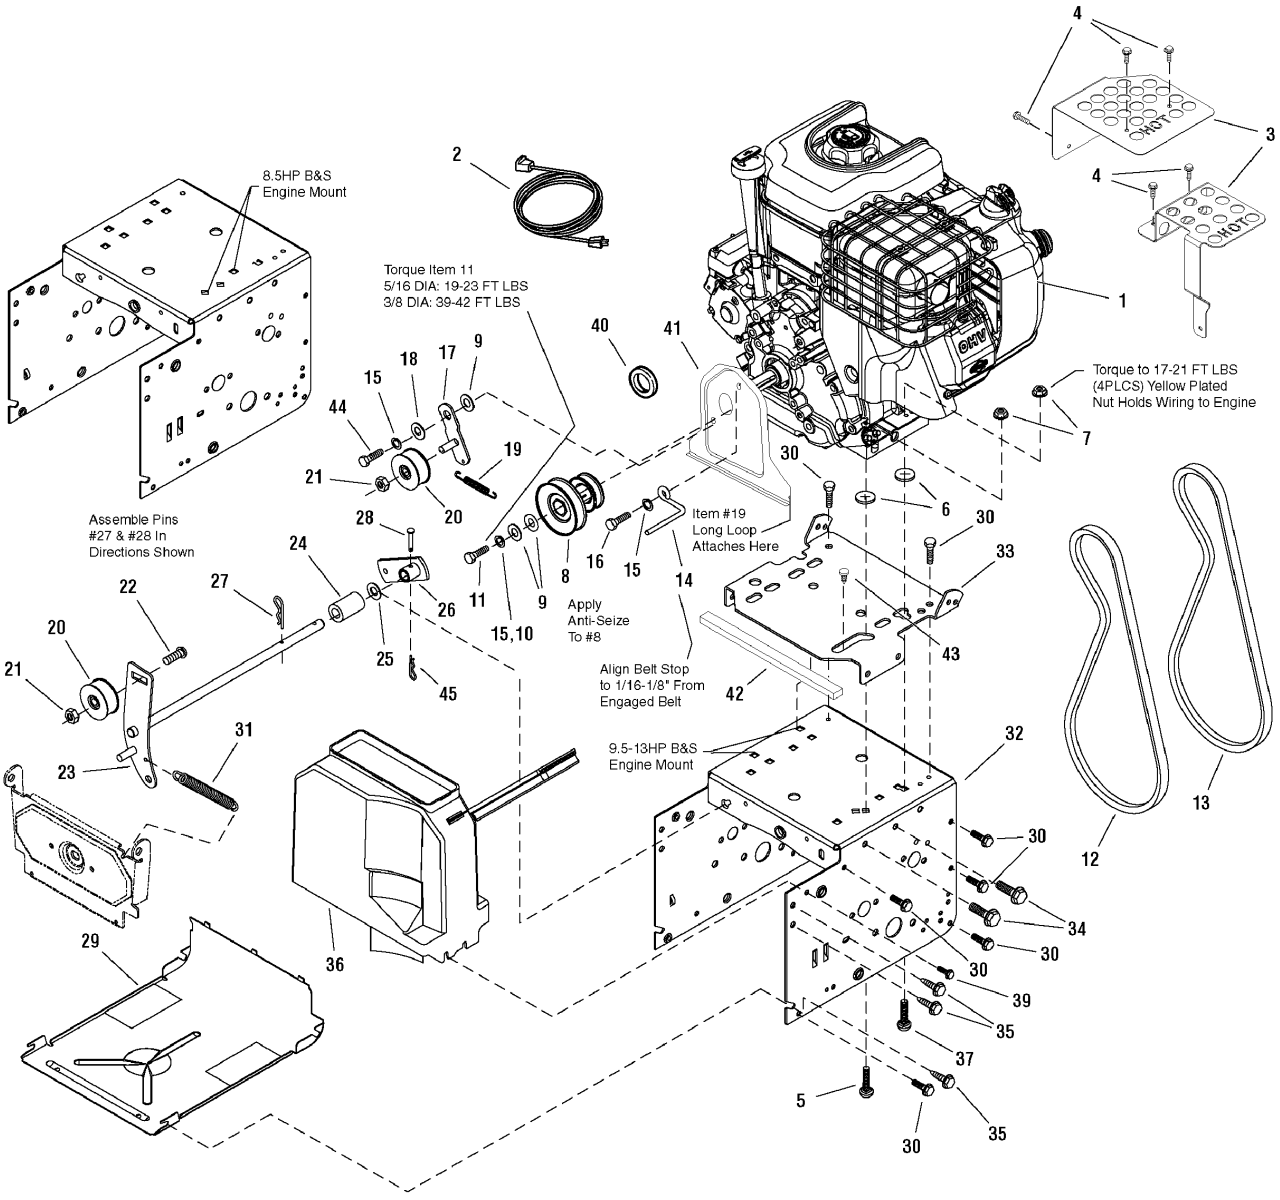
8.5HP B&S
Engine Mount
Torque Item 11
5/16 DIA: 19-23 FT LBS
3/8 DIA: 39-42 FT LBS
Assemble Pins
#27 & #28 In
Directions Shown
Apply
Anti-Seize
To #8
Item #19
Long Loop
Attaches Here
Align Belt Stop
to 1/16-1/8" From
Engaged Belt
9.5-13HP B&S
Engine Mount
Torque to 17-21 FT LBS
(4PLCS) Yellow Plated
Nut Holds Wiring to Engine
HOT
HOT

Engine & Frame Group

Item	Part No	Qty	Description	Note
32	1740572D	1	FRAME, EZ Turn Axle	*(Used on 26" Models)*
33	1733583D	1	PLATE, Engine Mount	
34	1924856	4	SCREW, Hex Washer Head Taptite 5/16-18 x 1/2	
35	1664847	6	SCREW, Hex Washer Head Taptite 5/16-18 x 3/4	
36	1733923	1	COVER, Belt w/Toolbox B&S	
39	722887	2	SCREW, 1/4-AB x 3/4 Hex	
40	1733898	1	SHAFT, Seal	
41	1733868A	1	SEAL, Plate	
42	1733897	1	SEAL, Strip	
43	1733924	1	CLIP, Pine Tree	*(Used on 28" Models)*
44	725996	1	CAPSCREW, Hex Head 5/16-24 x 1 G8	
45	7023590	1	PIN, Cotter, 1/4	

Footnotes:

Note* See your local Briggs & Strattion Distributor for Parts & Service.

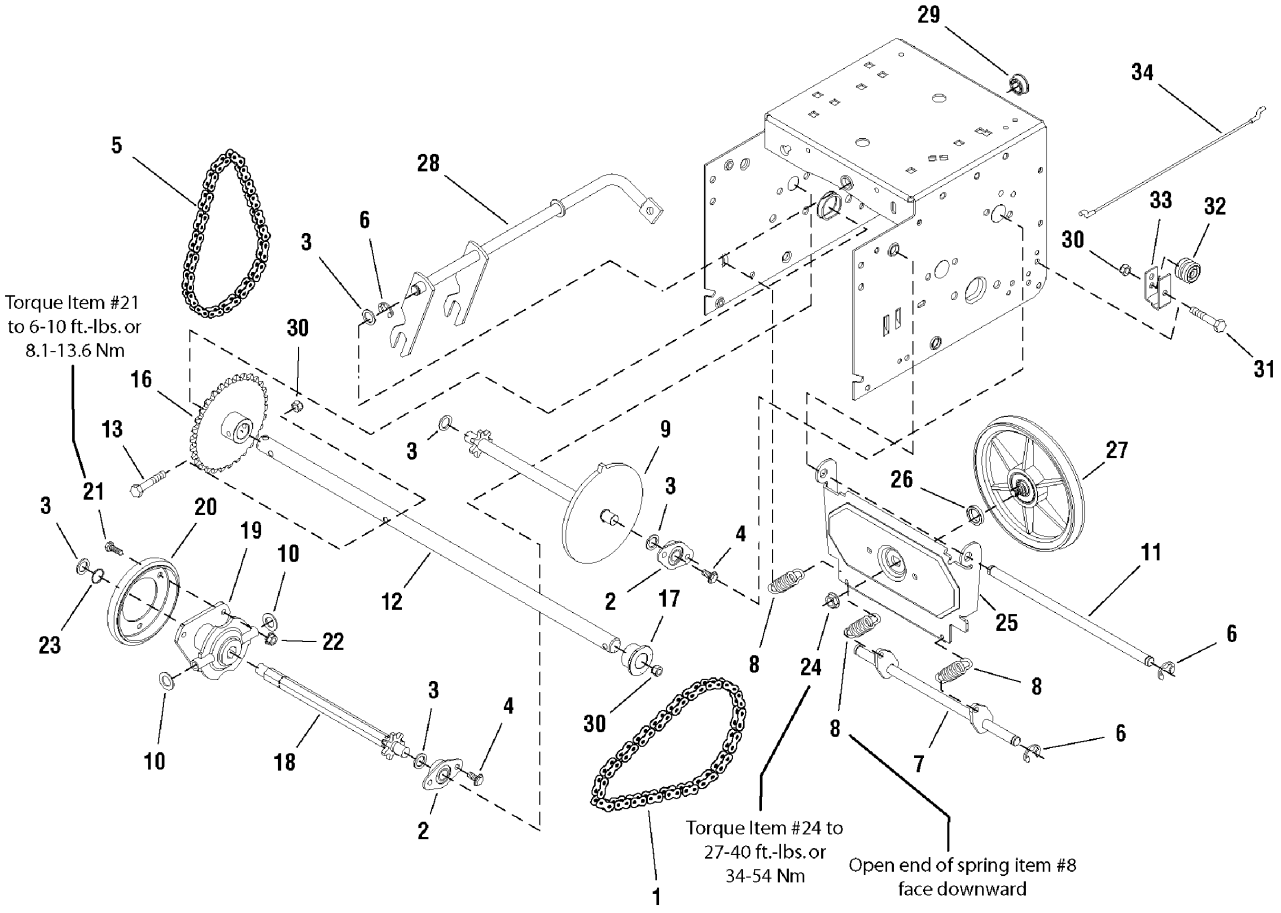
Torque Item #21
to 6-10 ft.-lbs. or
8.1-13.6 Nm
Torque Item #24 to
27-40 ft.-lbs. or
34-54 Nm
Open end of spring item #8
face downward

Traction Drive Group - Standard - 26" Model

Item	Part No	Qty	Description	Note
1	724613	1	CHAIN, Roller	
2	723655	4	RETAINER & BUSHING ASSEMBLY	
3	724619	5	WASHER	
4	1924856	8	SCREW, Hex Washer Head Taptite 5/16-18 x 1/2	
5	724627	1	CHAIN, Roller	
6	721910	5	RETAINER, Ring 7/16	
7	722377	1	SPRING LINK ASSEMBLY STANDARD	
8	1736469	3	SPRING, Extension	
9	722081	1	SPROCKET, Set	
10	1960027	2	WASHER, 1/2	
11	722082	1	AXLE, Swing Plate	
12	722211	1	AXLE, Bushing	
13	720220	1	BOLT, Hex 1/4-20 x 1-3/4	
16	722080	1	SPROCKET, Axle	
17	722091	2	BEARING, Axle D-Hole	
18	722083	1	HEX SHAFT & SPROCKET ASSEMBLY	
19	723694	1	HUB, Friction Wheel & Bearing	
20	722185	1	WHEEL, Friction	
21	1921959	3	CAPSCREW, Hex Head 1/4-20 x 5/8 G5	
22	1928372	3	NUT, Hex KEPS 1/4-20	
23	1733326	1	RING, Retaining, Extension	
24	722391	1	NUT, FlangeLock 38-24	
25	722069	1	PLATE, Swinging	
26	722110	1	SPACER, Friction Pulley	
27	722092	1	FRICTION PULLEY ASSEMBLY	
28	722087	1	SPEED SELECT ASSEMBLY	
29	724636	1	BEARING, Flange	
30	1920397	2	NUT, Hex Lock ESNA Light 1/4-20	
31	1922837	1	CAPSCREW, Hex Head 1/4-20 x 1-1/2 G5	
32	724621	1	SPOOL CABLE, Auger Control	
33	722070	1	BRACKET, Cable Spool	
34	722095	1	CABLE, Front Drive Lower All	

Footnotes:

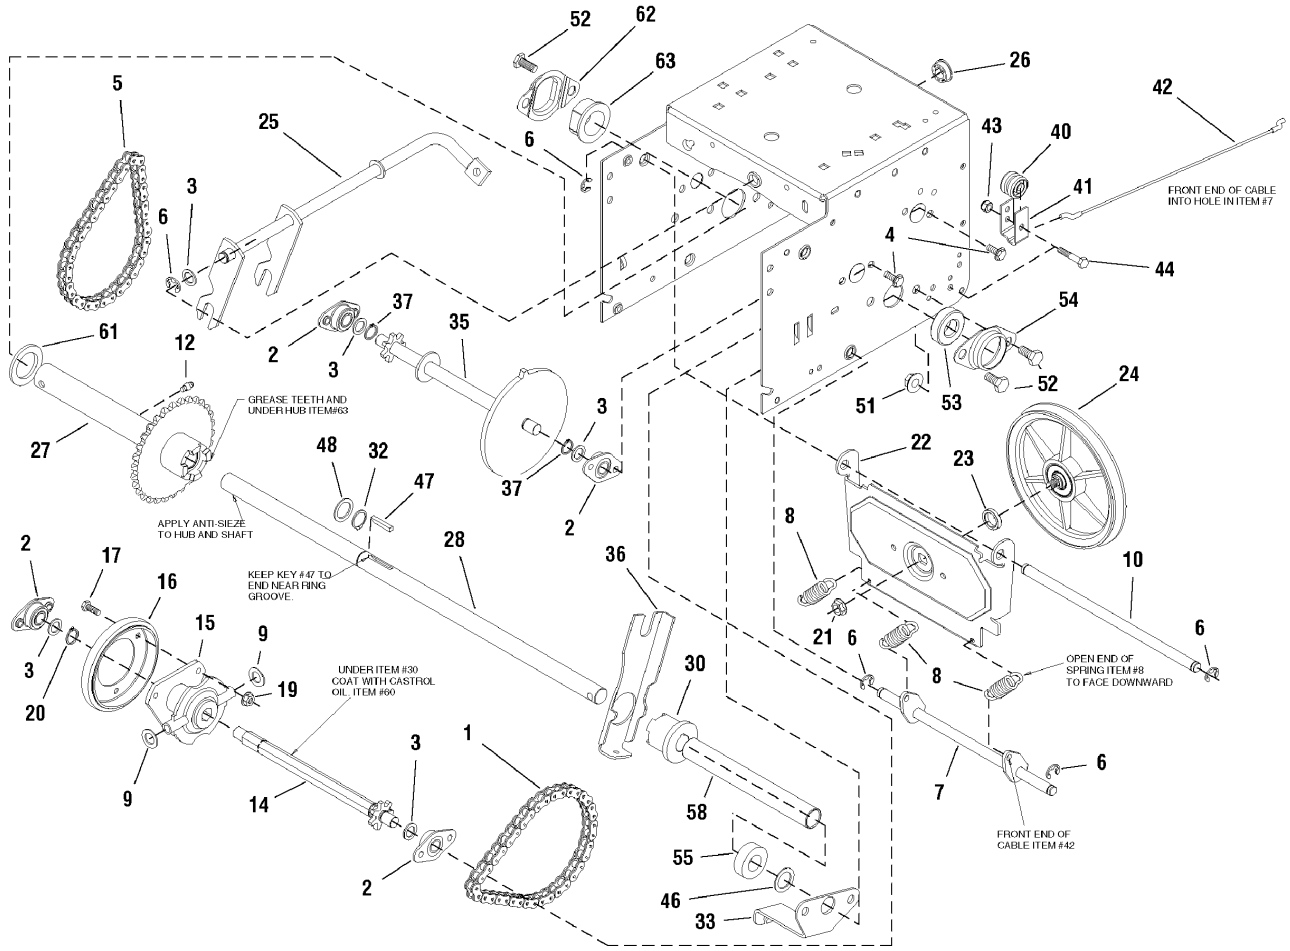
FRONT END OF CABLE INTO HOLE IN ITEM #7
GREASE TEETH AND UNDER HUB ITEM#63
APPLY ANTI-SIEZE TO HUB AND SHAFT
KEEP KEY #47 TO END NEAR RING GROOVE.
UNDER ITEM #30 COAT WITH CASTROL OIL, ITEM #60
OPEN END OF SPRING ITEM #8 TO FACE DOWNWARD
FRONT END OF CABLE ITEM #42

Traction Drive Group - EZ Turn - 28" Model

Item	Part No	Qty	Description	Note
1	724613	1	CHAIN, Roller	
2	723655	4	RETAINER & BUSHING ASSEMBLY	
3	724619	5	WASHER	
4	1924856	8	SCREW, Hex Washer Head Taptite 5/16-18 x 1/2	
5	724627	1	CHAIN, Roller	
6	721910	5	RETAINER, Ring 7/16	
7	722377	1	SPRING LINK ASSEMBLY	
8	722423	3	SPRING, Extension	
9	1960027	2	WASHER, 1/2	
10	722082	1	AXLE, Swing Plate	
12	2812808	1	FITTING, Lube	
14	722083	1	HEX SHAFT & SPROCKET ASSEMBLY	
15	723694	1	HUB, Friction Wheel & Bearing	
16	722185	1	WHEEL, Friction	
17	1921959	3	CAPSCREW, Hex Head 1/4-20 x 5/8 G5	
19	1928372	3	NUT, Hex KEPS 1/4-20	
20	1733326	1	RING, Retaining Extension	
21	722391	1	NUT, 3/8-24 Flange Lock	
22	722069	1	PLATE, Swinging	
23	722110	1	SPACER, Friction Pulley	
24	722092	1	FRICTION PULLEY ASSEMBLY	
25	722087	1	SPEED SELECT ASSEMBLY	
26	724636	1	BEARING, Flange	
27	1733085	1	SPROCKET & HUB ASSEMBLY, W/Bushings	
28	1732381	1	AXLE	
30	1732382	1	GEAR, Clutching Powedered Metal	
32	2827732	1	RING, Retaining Extension	
33	1732948A	1	SUPPORT, Clutch Cable	
35	1732389	1	SPROCKET & SHAFT ASSEMBLY	
36	1732383A	1	ARM, Clutch	
37	2860386	2	RING, Retaining Extension	
40	724621	1	SPOOL CABLE, Auger Control	
41	722070	1	BRACKET, Cable Spool	
42	722095	1	CABLE, Front Drive Lower All	
43	1920397	1	NUT, Hex Lock ESNA Light 1/4-20	
44	1922837	1	CAPSCREW, Hex Head 1/4-20 x 1-1/2 G5	
46	725394	1	WASHER, Flat	

Footnotes:

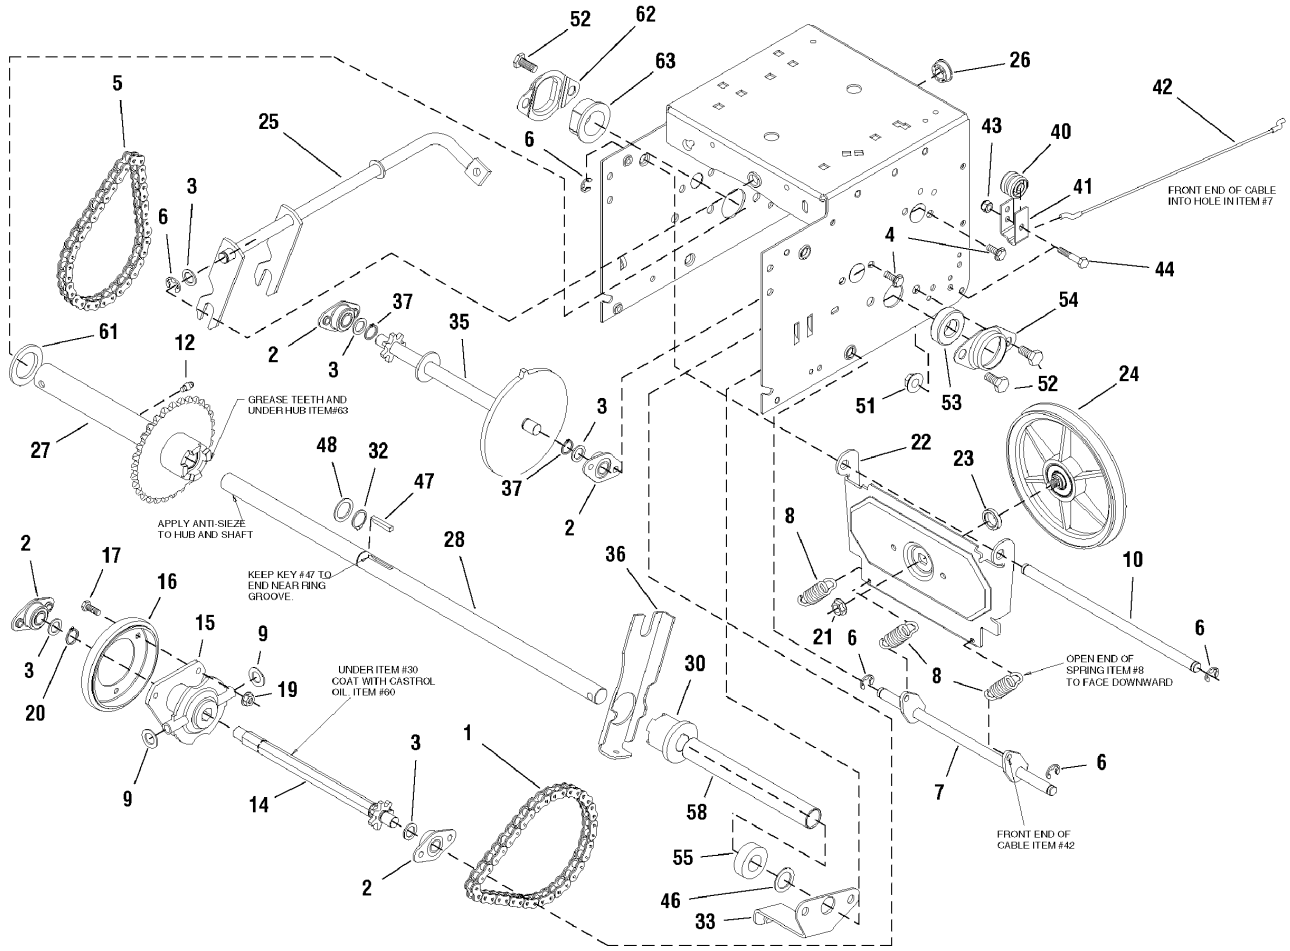
52
62
63
26
42
5
25
6
43
40
3
6
41
FRONT END OF CABLE INTO HOLE IN ITEM #7
4
44
37
54
61
12
2
3
35
GREASE TEETH AND UNDER HUB ITEM#63
51
53
52
24
27
3
22
48
32
47
37
2
23
APPLY ANTI-SIEZE TO HUB AND SHAFT
8
2
17
28
36
10
KEEP KEY #47 TO END NEAR RING GROOVE.
16
15
9
21
6
6
3
20
19
UNDER ITEM #30 COAT WITH CASTROL OIL, ITEM #60
30
OPEN END OF SPRING ITEM #8 TO FACE DOWNWARD
8
9
14
3
1
7
6
58
FRONT END OF CABLE ITEM #42
2
55
46
33

Traction Drive Group - EZ Turn - 28" Model

Item	Part No	Qty	Description	Note
47	1667622	1	KEY, Hi Pro	
48	1960114	1	WASHER, 3/4	
51	1928352	4	NUT, Hex Flange 3/8-16 Whiz Lock	
52	1921965	4	CAPSCREW, Hex Head 3/8-16 x 3/4 G5	
53	724409	1	BEARING, Ball	
54	724347	1	RETAINER, Bearing	
55	722228	1	COLLAR, Locking	
58	1720298	1	SPRING, Compression	
61	2860169	1	WASHER, 1-3/16	
62	1733101	1	RETAINER, Bushing	
63	1720305	1	BUSHING, Plastic	

Footnotes:

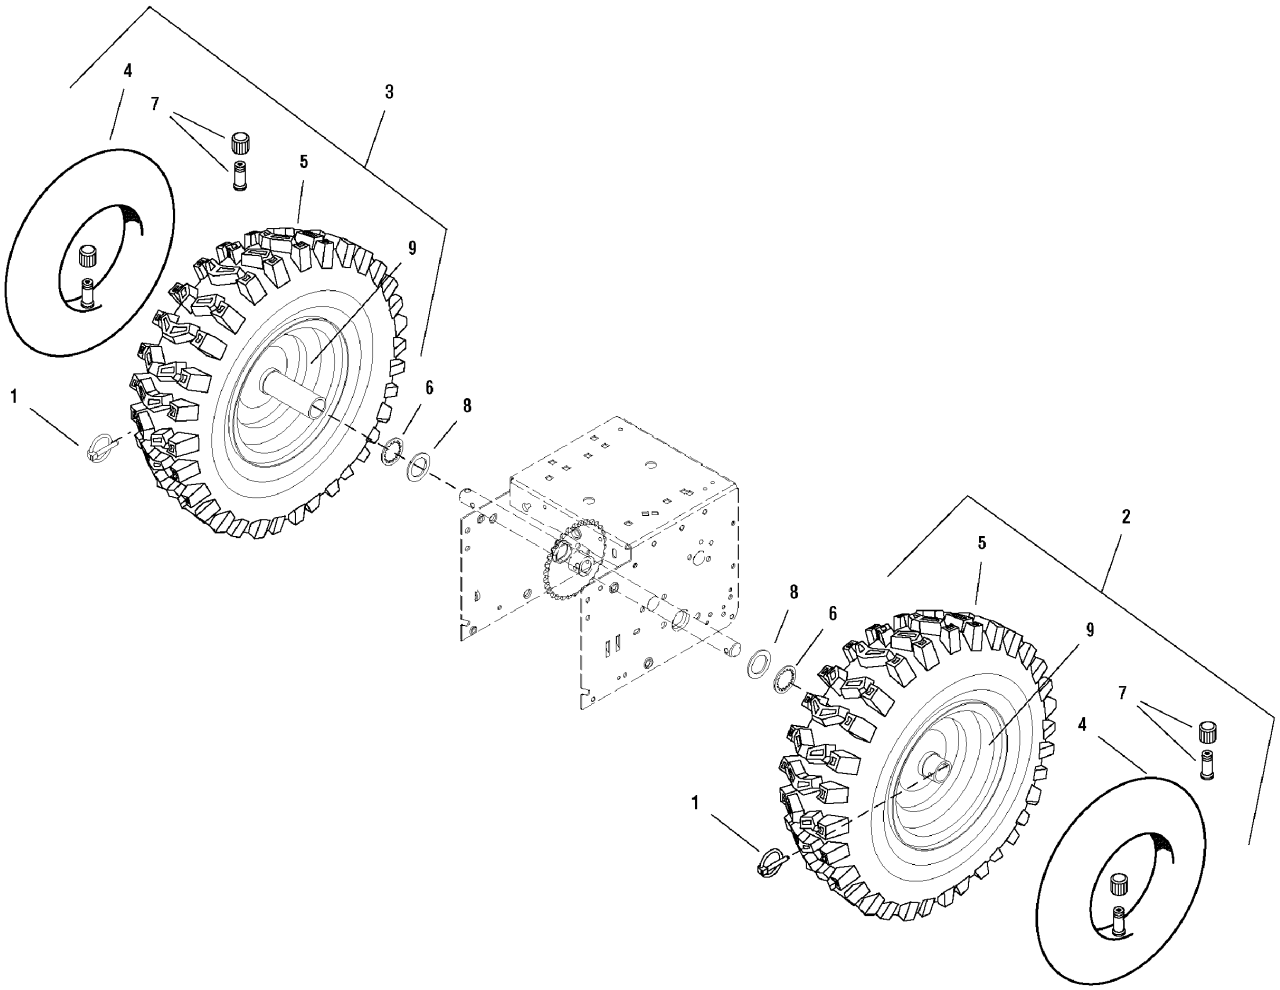
4
7
3
5
9
1
6
8
2
5
8
6
9
7
4
1

Wheel & Tire Group

Item	Part No	Qty	Description	Note
1	1731186	2	PIN, Klik .313 x 1.97	*(Used on 28" Models)*
1	1679697	2	PIN, Klik 1/4 x 1-3/4	*(Used on 26" Models)*
2	1723169	1	WHEEL & TIRE ASSEMBLY, 15 x 5 L.H.	*(Used on 28" Models)*
2	1732935	1	WHEEL & TIRE ASSEMBLY, 15 x 5 L.H & R.H.	*(Used on 26" Models)*
3	1733089	1	WHEEL & TIRE ASSEMBLY, 15 x 5 R.H.	*(Used on 28" Models)*
3	1732935	1	WHEEL & TIRE ASSEMBLY, 15 x 5 L.H & R.H.	*(Used on 26" Models)*
4	1664090	1	TUBE, Tire 4.10/3.50-6 L.H.	*(Used on 28" Models)*
5	1723287	1	TIRE, 15 x 5.00-6, 2 PLY, KENDA L.H.	*(Used on 28" Models)*
6	1657528	2	RETAINING RING, Extension, #75 3/4 Self Lock	*(Used on 26" Models)*
7	2172353	1	VALVE STEM & CAP	*(Used on All Models)*
8	725394	2	WASHER, Flat	*(Used on 26" Models)*
9	1723286	1	HUB, Wheel L.H.	*(Used on 28" Models)*

Footnotes:

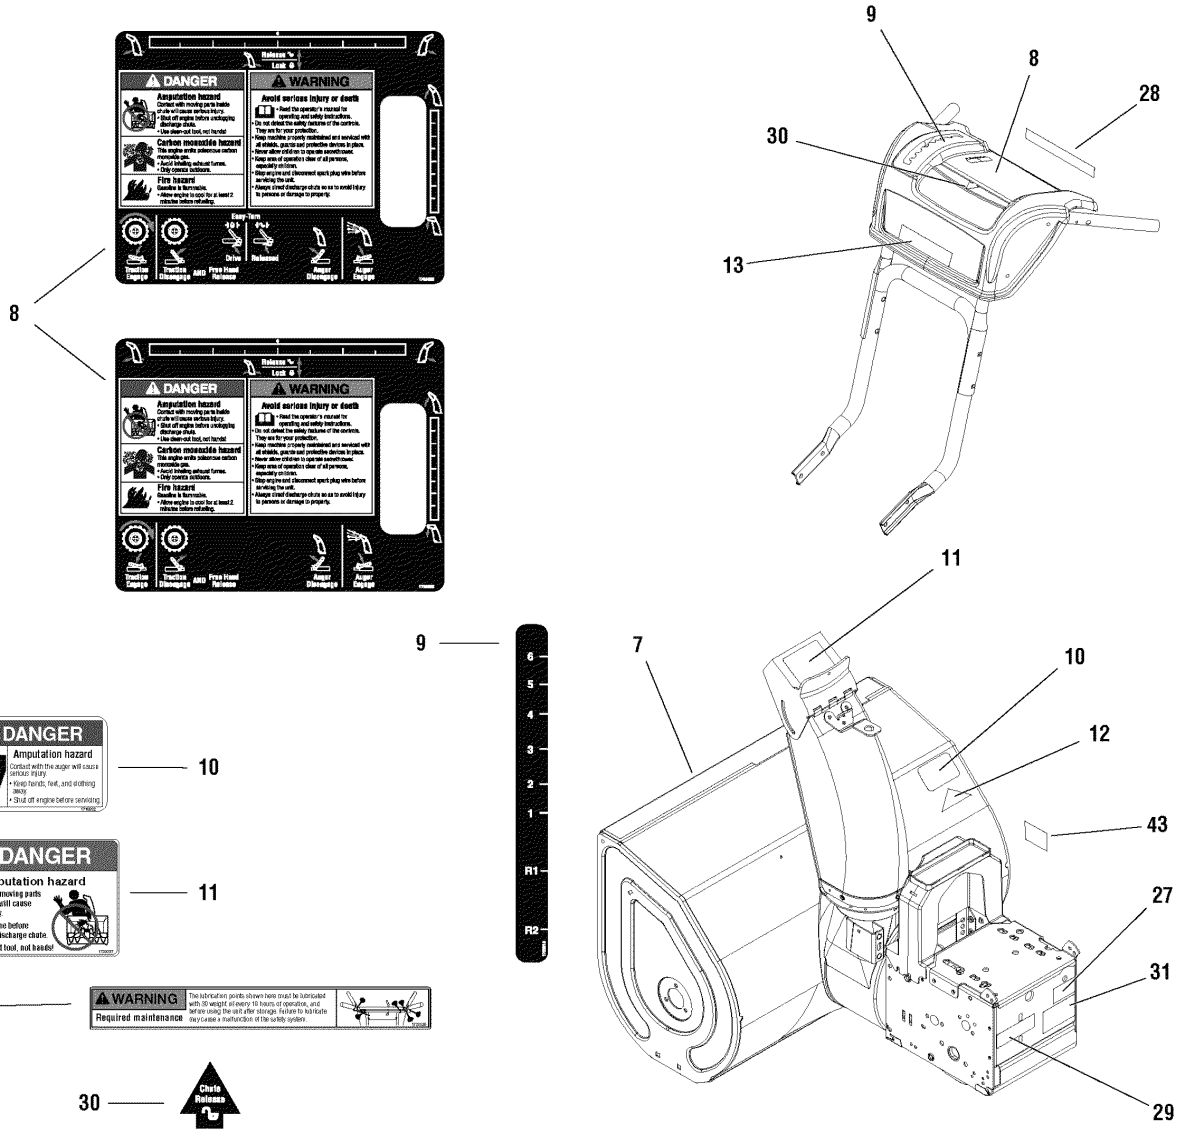
8
9
6
5
4
3
2
1
R1
R2
10
11
28
30
Release
Lock
DANGER
WARNING
Amputation hazard
Carbon monoxide hazard
Fire hazard
Avoid serious injury or death
Easy-Turn
Drive
Release
Traction Engage
Traction Disengage
AND
Fire Hose Release
Auger Disengage
Auger Engage
Amputation hazard
Contact with the auger will cause serious injury
• Keep hands, feet, and clothing away
• Shut off engine before servicing
Amputation hazard
Contact with moving parts inside chute will cause serious injury.
Shut off engine before unclogging discharge chute.
Use clean-out tool, not hands!
WARNING
Required maintenance
The lubrication points shown here must be lubricated with 30 weight oil every 10 hours of operation, and before using the unit after storage. Failure to lubricate may cause a malfunction of the safety system.
Chute Release
9
8
28
30
13
11
7
10
12
43
27
31
29

Decals Group

Item	Part No	Qty	Description	Note
7	1736764	1	DECAL, Snapper 1428L, Stripe	
7	1736763	1	DECAL, Snapper 1226L, Stripe	
8	1733056	1	DECAL, Dashboard Standard Drive	
8	1733033	1	DECAL, Dashboard EZ Turn	
9	1733772	1	DECAL, Shift 1,2,3,4,5,6 R1 R2	
10	1716532	1	DECAL, Danger Avoid Injury From Auger	
11	1733057	1	DECAL, Danger Amputation Hazard	
12	--	1	* DECAL, OPEI Certified ANSI	*Note *Not a serviceable part.*
13	5101445	1	DECAL, Snapper, w/o Turtle	
27	728183	1	DECAL, Over Adjustment of Friction Disc	
28	1733526	1	DECAL, Warning Lubrication	
29	1720454	1	DECAL, Touch Up Paint Orange, Black, Red	
30	1733443	1	DECAL, Chute Release Arrow	
31	--	1	* STICKER, Serial w/Bar Code	*Note *Not a serviceable part.*
43	725432	1	DECAL, Belt Stretch & Adjustment	

Footnotes:

Parts Manual for

SNAPPER®

LARGE FRAME 26" & 28" TWO-STAGE SNOWTHROWERS 2009

IT IS THE POLICY OF BRIGGS & STRATTON CORP TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS

Briggs & Stratton Yard Power Products Group
535 Macon Road
McDonough, GA, 30253 U.S.A.
800-935-2967

www.snapper.com

Copyright © 2008 Briggs & Stratton Corporation
Milwaukee, WI USA. All Rights Reserved

Manual No. 1737016
Revision A, 9/26/2008
TP 400-5408-A-LF-N